

PROGRAMMING YOUR REMOTE FOR POWER & VOLUME

START WITH TV TURNED ON




Code Search Method:

- The following steps need to be done in quick succession.
- Press and release the TV **(1)** button.
- Press and hold the RCU SETUP **(2)** until the TV button blinks twice.
- Enter **9-9-1**.
- Press and release the CH+ or CH- **(4)** until the TV shuts off. When you are doing the CH + or CH -, you must do it slow enough to react when your TV shuts off. Be patient, you may have to hit CH + or CH - up to 300 times.
- Press the POWER **(3)** button to turn the TV on.
- Press the RCU SETUP **(2)** button to store the code for the TV. The TV button will blink twice. The remote is now ready to operate the TV.

Lock Power Button For TV:

- The following steps need to be done in quick succession.
- Press the STB **(5)** button.
- Press and hold the RCU SETUP **(2)** until the LED button blinks twice.
- Enter in **9-9-5**.
- Press the Power **(3)** button.
- Press the TV **(1)** button.
- Press and hold the RCU SETUP **(2)** until the LED button blinks twice. Nothing happens to the TV during this process.

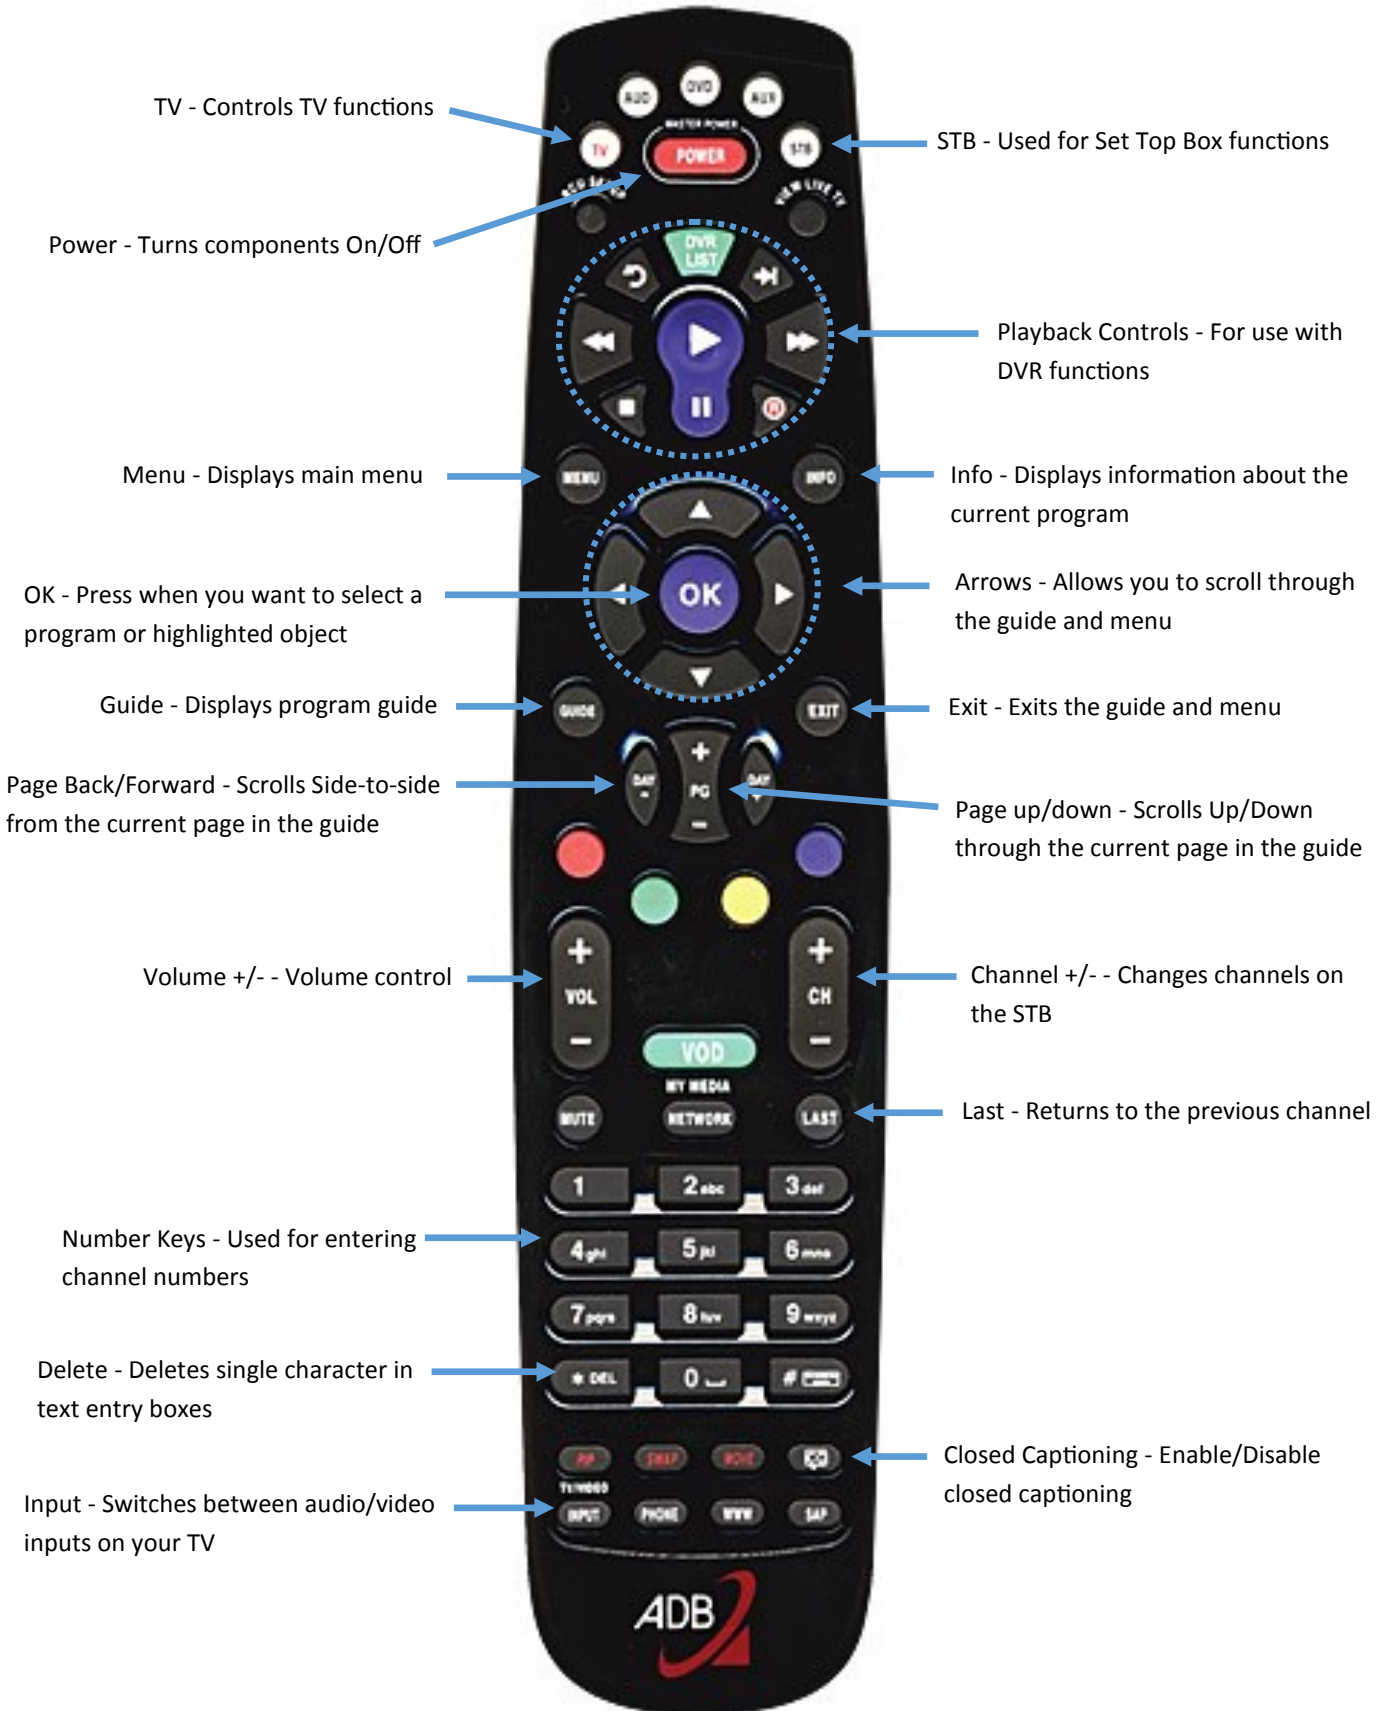

TV - Controls TV functions

STB - Used for Set Top Box functions

Power - Turns components On/Off

Playback Controls - For use with DVR functions

Menu - Displays main menu

Info - Displays information about the current program

OK - Press when you want to select a program or highlighted object

Arrows - Allows you to scroll through the guide and menu

Guide - Displays program guide

Exit - Exits the guide and menu

Page Back/Forward - Scrolls Side-to-side from the current page in the guide

Page up/down - Scrolls Up/Down through the current page in the guide

Volume +/- - Volume control

Channel +/- - Changes channels on the STB

Last - Returns to the previous channel

Number Keys - Used for entering channel numbers

Delete - Deletes single character in text entry boxes

Closed Captioning - Enable/Disable closed captioning

Input - Switches between audio/video inputs on your TV

